


WARNING!

To avoid the danger of falling, please do not use the roll cage and front windshield to pick up this rig. (could use front & rear bumper)

警告!

為避免損害，請勿使用 前擋玻璃 與 防滾籠 來提取車輛。(請使用前後保桿提取)

tws

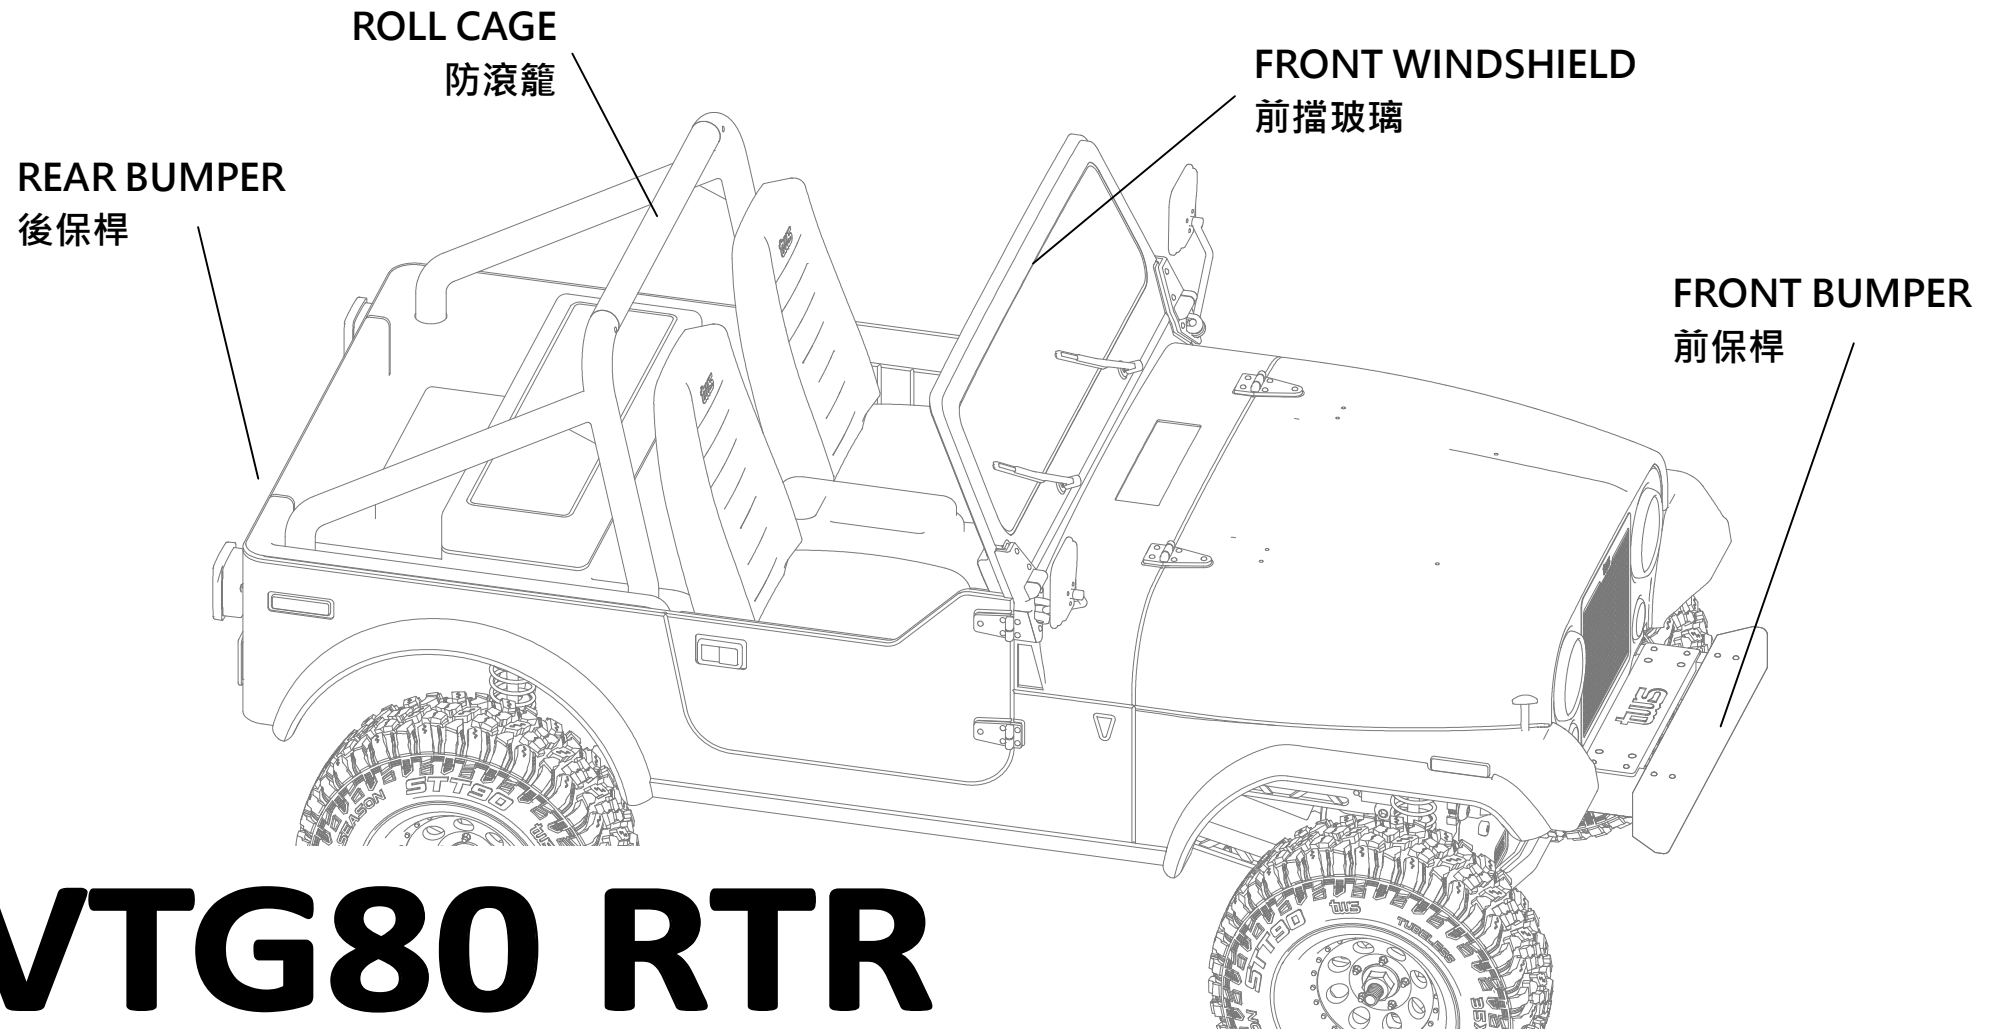


VTG80 RTR

Please use Hex 2.0 tool to open the body shell.

請使用 2.0 六角工具 卸除車殼螺絲以掀開車殼。

body screw
車殼固定螺絲

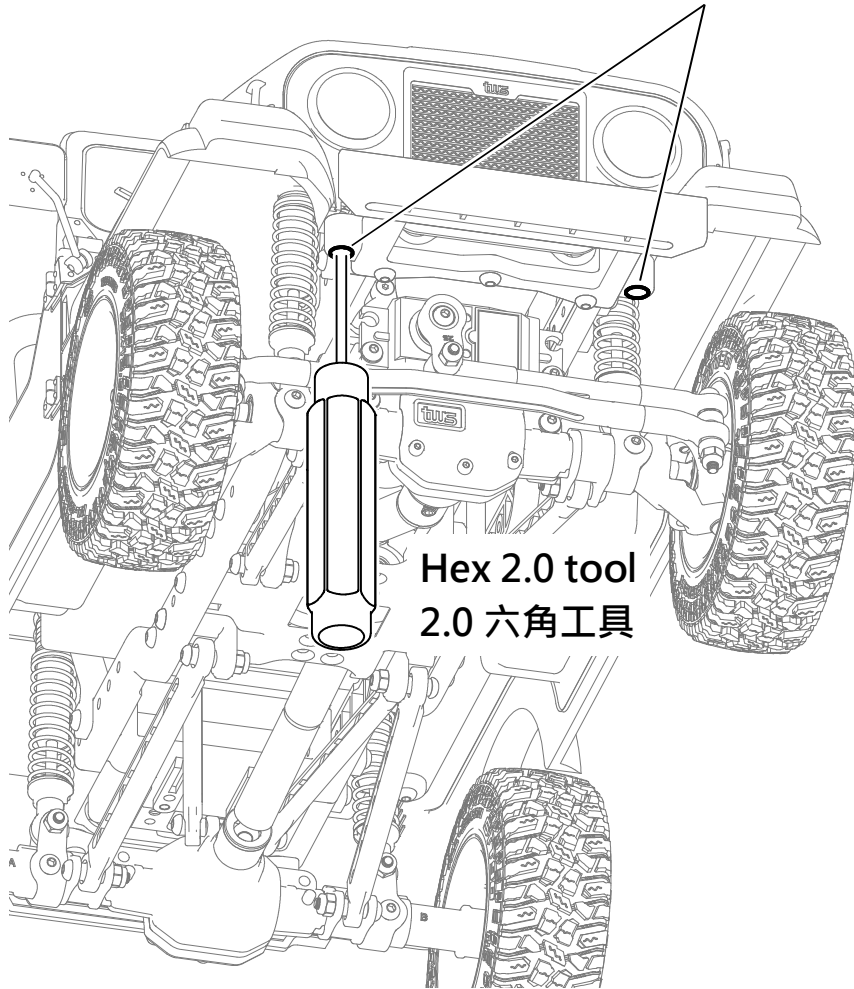


Hex 2.0 tool
2.0 六角工具

tws



Open the body shell to maintain
掀開車殼以進行維護

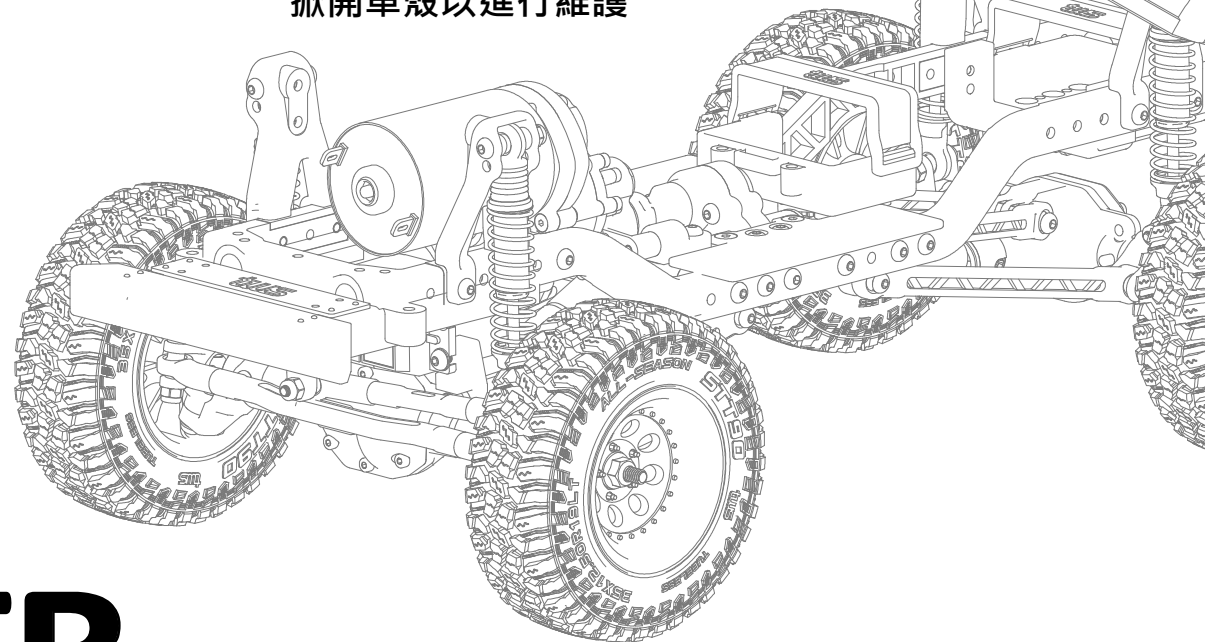

VTG80 RTR

VTG80 RTR EXPLODED MANUAL

tws

CAUTIONS

To prevent serious personal injury and/or property damage, operate all remotely controlled models in a responsible manner as outlined herein.

CHOOSE THE RIGHT PLACE TO OPERATE YOUR R/C MODEL

- Do not run on public streets or highways. This could cause serious accidents, personal injuries or property damage.
- Never run R/C models near people or animals.
- To avoid injury, do not run in confined spaces.
- Do not run where loud noises can disturb others, such as hospitals and residential areas.
- Never run indoors. There is a high risk of fire and/or damage.

INSPECT YOUR MODEL BEFORE OPERATION

- Make sure that all screws and nuts are properly tightened. It is also a good idea to use removable thread lock wherever metal screws go into metal, especially for engine mounts.
- Always use fresh batteries for your transmitter and for your receiver to avoid losing control. of the model.

AFTER OPERATION OF YOUR R/C MODEL

- Disconnect the battery from the ESC, then turn off the transmitter. This will prevent runaways.
- Be careful when handling batteries, they will be hot after running.
- Replace any batteries that have been dented or have frayed wires, short circuits can cause fire.
- Be sure to keep your R/C model clean and free of excess dirt and grease, this will increase the life.

注意事項

為防止嚴重的人身傷害和或財產損失，請如本文所述之方式，操作所有類型的遙控模型。

選擇合適的地方來操作您的遙控模型

- 不可在公共街道或高速公路上使用。這可能導致嚴重事故、人身傷害或財產損失。
- 切勿在人或動物附近使用所有遙控模型。
- 為避免受傷，請勿在密閉空間使用。
- 不要在會干擾他人的地方使用，例如醫院和住宅區。
- 永遠不要在室內使用。發生火災或損壞的風險很高。

操作前檢查您的模型

- 確保所有螺絲和螺帽均已正確擰緊。在螺絲進入金屬的任何地方使用螺絲防鬆膠是一個很好的方法，特別是對於馬達支架。
- 始終為發射器和接收器使用狀態良好的電池，以免對遙控模型失去控制。

使用後的遙控模型

- 斷開電子變速器上的電池插頭，然後關閉遙控器，這將防止失控與電池過放。
- 處理電池時要小心，它們在使用後可能會很燙。
- 更換任何有凹痕或電線破皮的電池，可能導致短路而引起火災。
- 一定要保持你的遙控模型乾淨，沒有多餘的污垢和油脂，這將增加使用壽命。


PARTS LIST

70200100	STT90 30X90X1.9 卡車胎 (2)	STT90 30X90X1.9 Truck tires (2)	72002000	減速齒組	Reducer gear set
70200200	tws 貼紙 (2)	tws Sticker (2)	72002100	避震器配件組	Shock accessories set
70200400BK	52X31-3 type A 輪框 (黑) (4)	52X31-3 type A Rims (black) (4)	72002200	電池座組	Battery mount set
70200500BK	52X31-3 type B 輪框 (黑) (4)	52X31-3 type B Rims (black) (4)	72002300	減速箱傳動軸	Reducer propeller shaft
70200620	馬達齒 M0.6-20T	Pinion gear M0.6-20T	72002400	下連桿座組	Lower link mount set
70200700	tws 抗磨耐壓油 1g	tws Anti-wear grease 1g	77022008	有頭螺絲 M2X8 (10)	Cap screw M2X8 (10)
70200900	鋼針移除器	Shaft remover	77022010	有頭螺絲 M2X10 (10)	Cap screw M2X10 (10)
71000100	主軸	Main shaft	77022020	有頭螺絲 M2X20 (10)	Cap screw M2X20 (10)
71000200	齒軸	Gear shaft	77012510	沉頭螺絲 M2.5X10 (10)	FH screw M2.5X10 (10)
71000300	輸出軸	Output shaft	77003005	半圓頭螺絲 M3X5 (10)	RH screw M3X5 (10)
71000400FS	避震桶身 (消光銀) (2)	Shock body (flat silver) (2)	77003008	半圓頭螺絲 M3X8 (10)	RH screw M3X8 (10)
71000500	避震軸心 (2)	Piston rod (2)	77003010	半圓頭螺絲 M3X10 (10)	RH screw M3X10 (10)
71000600	套管 3X4X4.5 (4)	Tube 3X4X4.5 (4)	77003012	半圓頭螺絲 M3X12 (10)	RH screw M3X12 (10)
71000700	軟避震彈簧 43mm (4)	Soft shock spring 43mm (4)	77003016	半圓頭螺絲 M3X16 (10)	RH screw M3X16 (10)
71000900	傳動軸軸聯器組	Driveshaft coupler set	77003018	半圓頭螺絲 M3X18 (10)	RH screw M3X18 (10)
71001000	前傳動軸 L	Front driveshaft L	77003020	半圓頭螺絲 M3X20 (10)	RH screw M3X20 (10)
71001100	前傳動軸 S	Front driveshaft S	77003025	半圓頭螺絲 M3X25 (10)	RH screw M3X25 (10)
71001200	後傳動軸 L	Rear driveshaft L	77013006	沉頭螺絲 M3X6 (10)	FH screw M3X6 (10)
71001300	後傳動軸 S	Rear driveshaft S	77013008	沉頭螺絲 M3X8 (10)	FH screw M3X8 (10)
71001400	傘齒組 13T&26T	Bevel gear set 13T&26T	77013010	沉頭螺絲 M3X10 (10)	FH screw M3X10 (10)
71001500	直軸齒座	Locker spool	77033003N	止付螺絲 M3X3 耐落 (10)	Grub screw M3X3 (10)
71001600	十字軸 (2)	Cross joint (2)	77033016	止付螺絲 M3X16 (10)	Grub screw M3X16 (10)
71001700	輪軸 (2)	Wheel axle (2)	77024016	有頭螺絲 M4X16 (10)	Cap screw M4X16 (10)
72000100	上下連桿組	Upper & lower links set	77102919	O型環 P3 (10)	O-ring P3 (10)
72000200	A162 連桿座組	A162 Link mount set	77102919C	O型環 P3 (透明) (10)	O-ring P3 (clear) (10)
72000300	A162 轉向座組	A162 Steering knuckle set	77106010	O型環 6X1 (10)	O-ring 6X1 (10)
72000400	A162 轉向C座組	A162 knuckle carrier set	77900001	E扣 2.0 (10)	E-clip 2.0 (10)
72000500	A162 後軸固定座組	A162 Axle lockout set	77900002	E扣 4.0 (10)	E-clip 4.0 (10)
72000600	5.8X7 球頭 (16)	5.8X7 Ball stud (16)	77900004	螺帽 M3 (10)	Nut M3 (10)
72000700	A162 軸殼	A162 Axle housing	77900005	防鬆螺帽 M3 (10)	Lock nut M3 (10)
72000800	中傳軸	Propeller shaft	77900006	防鬆螺帽 M4 (10)	Lock nut M4 (10)
72000900	車樑組	Frame set	77900007	墊片 3X6X0.5 (10)	Spacer 3X6X0.5 (10)
72001000	底盤組	Chassis set	77900008	R扣 6.0 (10)	R-clip 6.0 (10)
72001100	前後橫樑組	F&R Crossmember set	77900009	銷丁螺絲 M4X12X2.5 (10)	Screw pin M4X12X2.5 (10)
72001200	避震架組	Shock tower set	78020078	鋼針 2X7.8 (10)	Shaft 2X7.8 (10)
72001300	車殼支柱組	Body post set	78020098J	鋼針 2X9.8 (10)	Shaft 2X9.8 (10)
72001400	5.8 拉桿頭組	5.8 Rod end set	78020108J	鋼針 2X10.8 (10)	Shaft 2X10.8 (10)
72001500	伺服機片組	Servo horn set	78025098	鋼針 2.5X9.8 (10)	Shaft 2.5X9.8 (10)
72001600	轉向拉桿組	Steering link set	79040830	滾珠軸承 4X8X3 (4)	Ball bearing 4X8X3 (4)
72001700	分動箱組	Transfer case set	79051040	滾珠軸承 5X10X4 (4)	Ball bearing 5X10X4 (4)
72001800	驅動齒輪組	Transfer gear set	79081440	滾珠軸承 8X14X4 (4)	Ball bearing 8X14X4 (4)
72001900	減速箱組	Reducer case set	79101540	滾珠軸承 10X15X4 (4)	Ball bearing 10X15X4 (4)

Please refer to the KIT manual if you need more detail.
如需更詳細的資訊，請參閱 KIT 說明書。

EXPLODED VIEW

FRONT & REAR AXLE

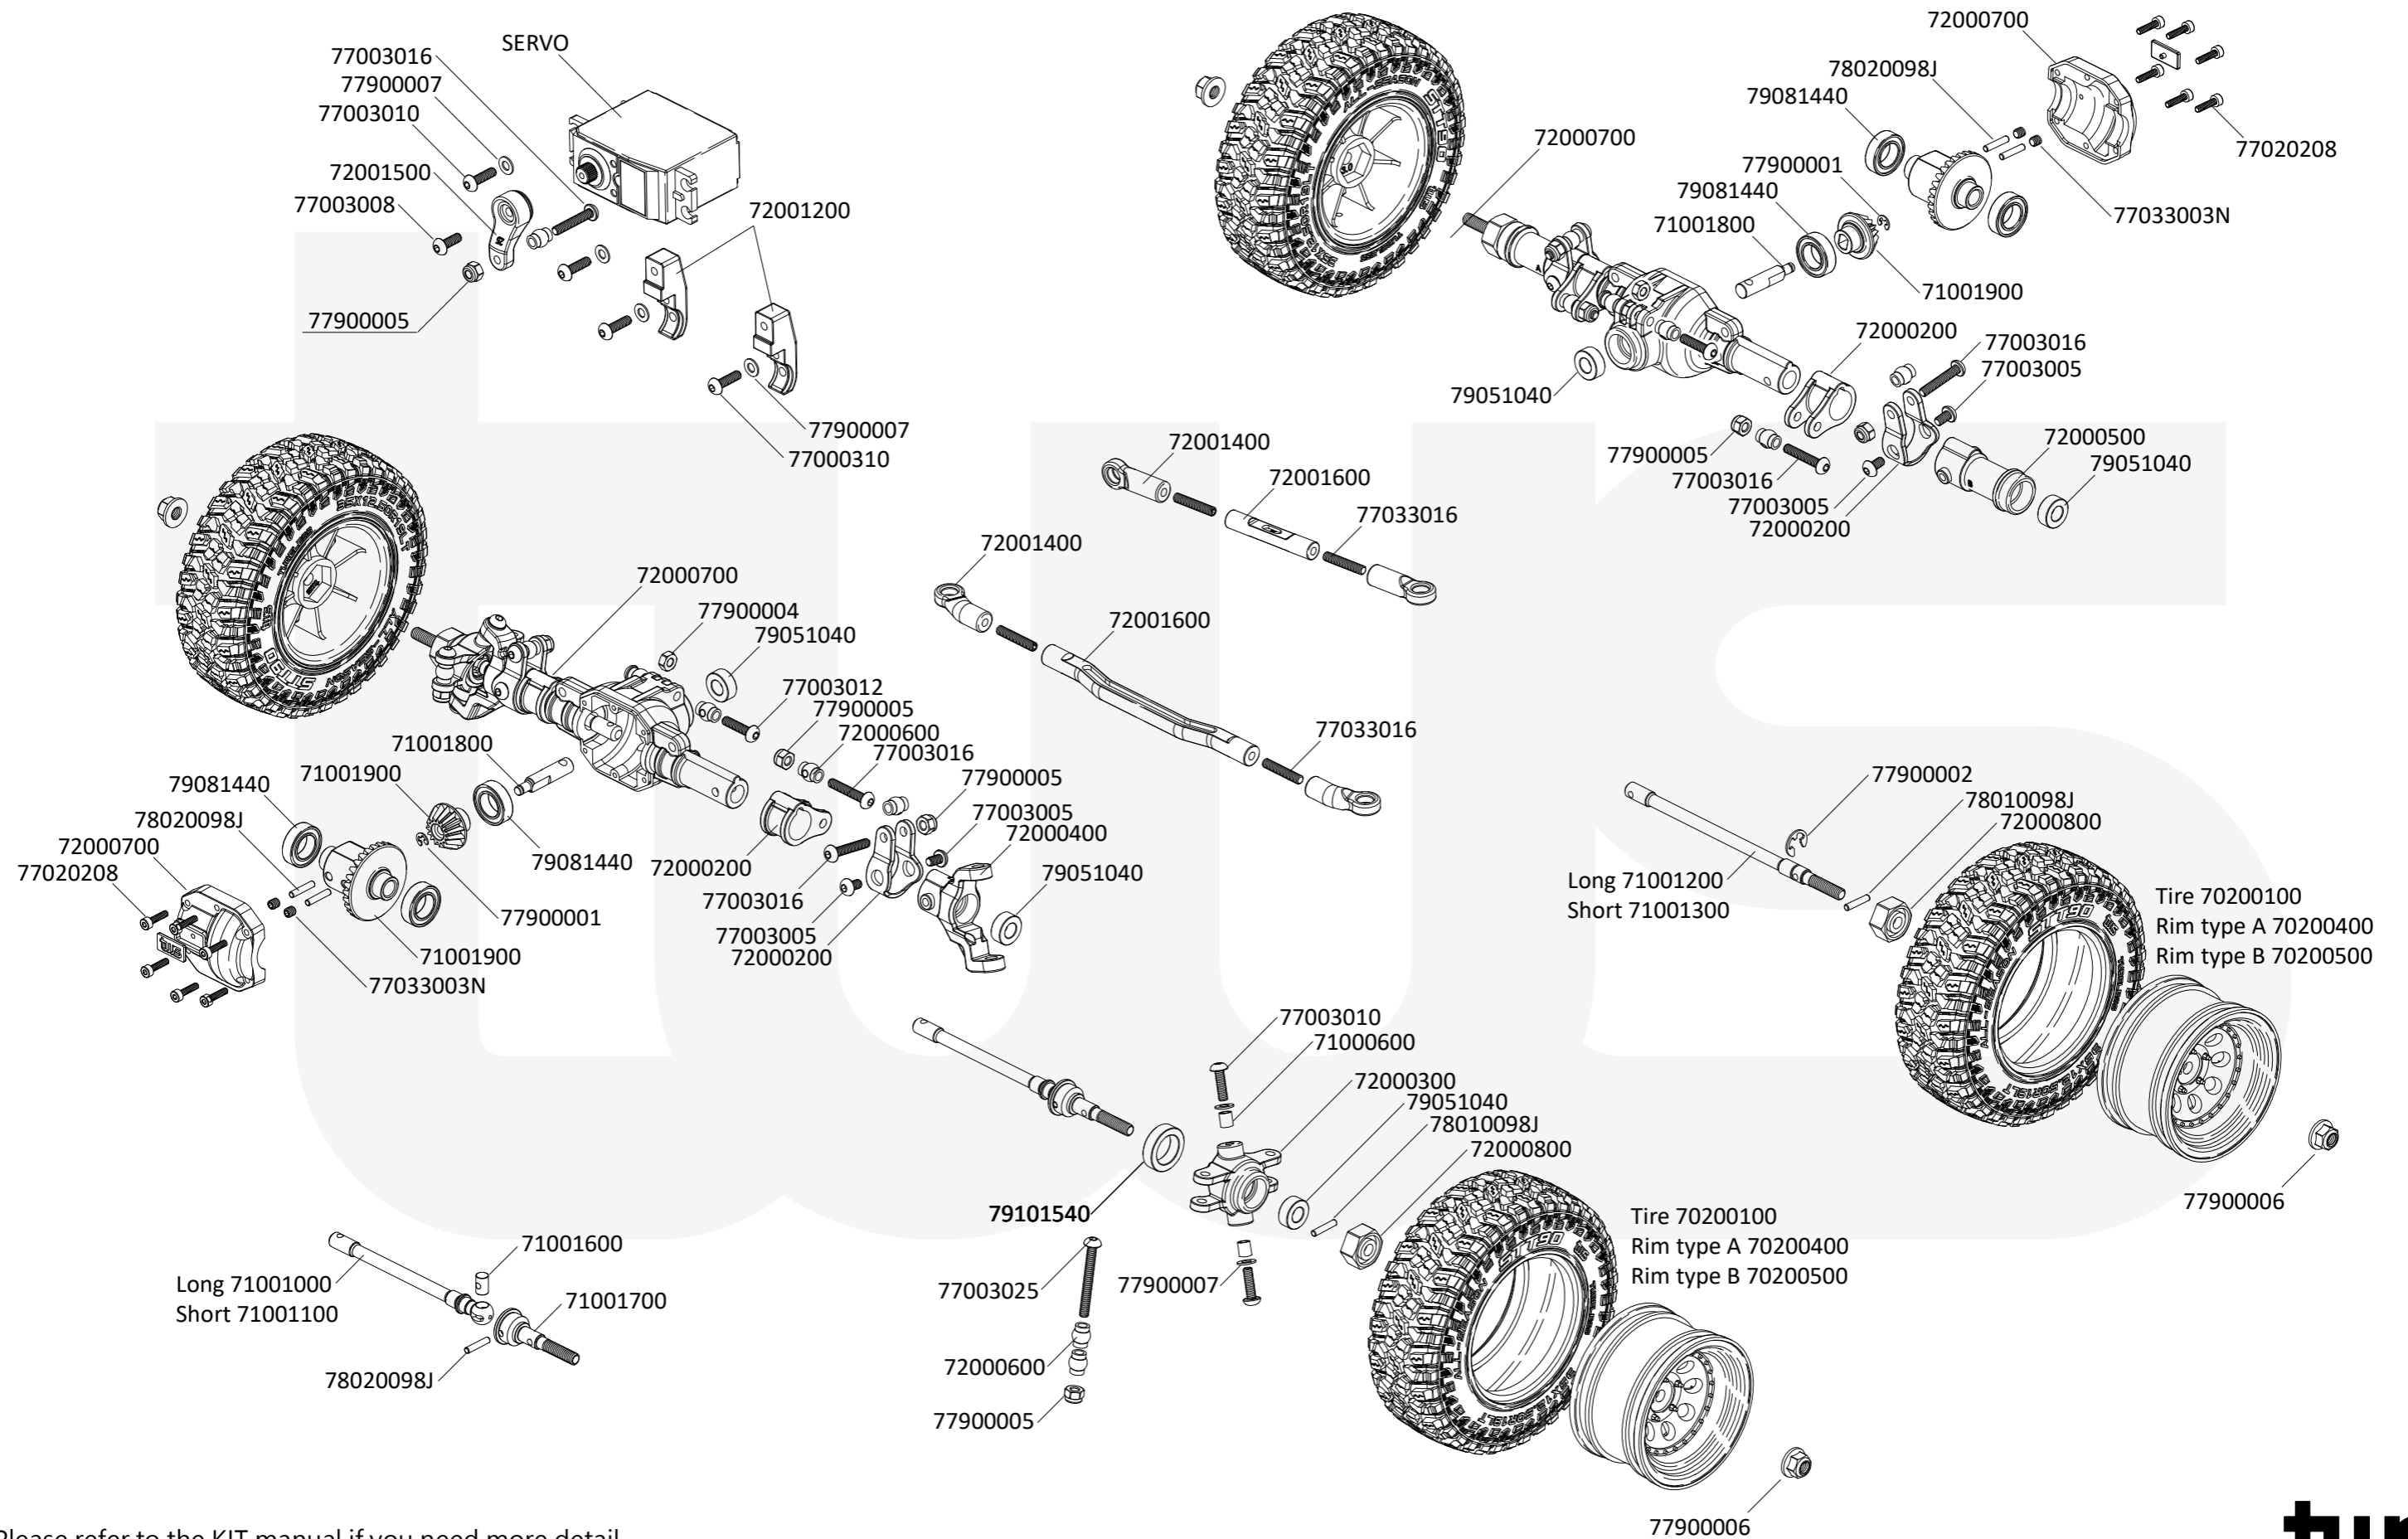


Please refer to the KIT manual if you need more detail.
如需更詳細的資訊，請參閱 KIT 說明書。



EXPLODED VIEW

SUSPENSION & FRAME

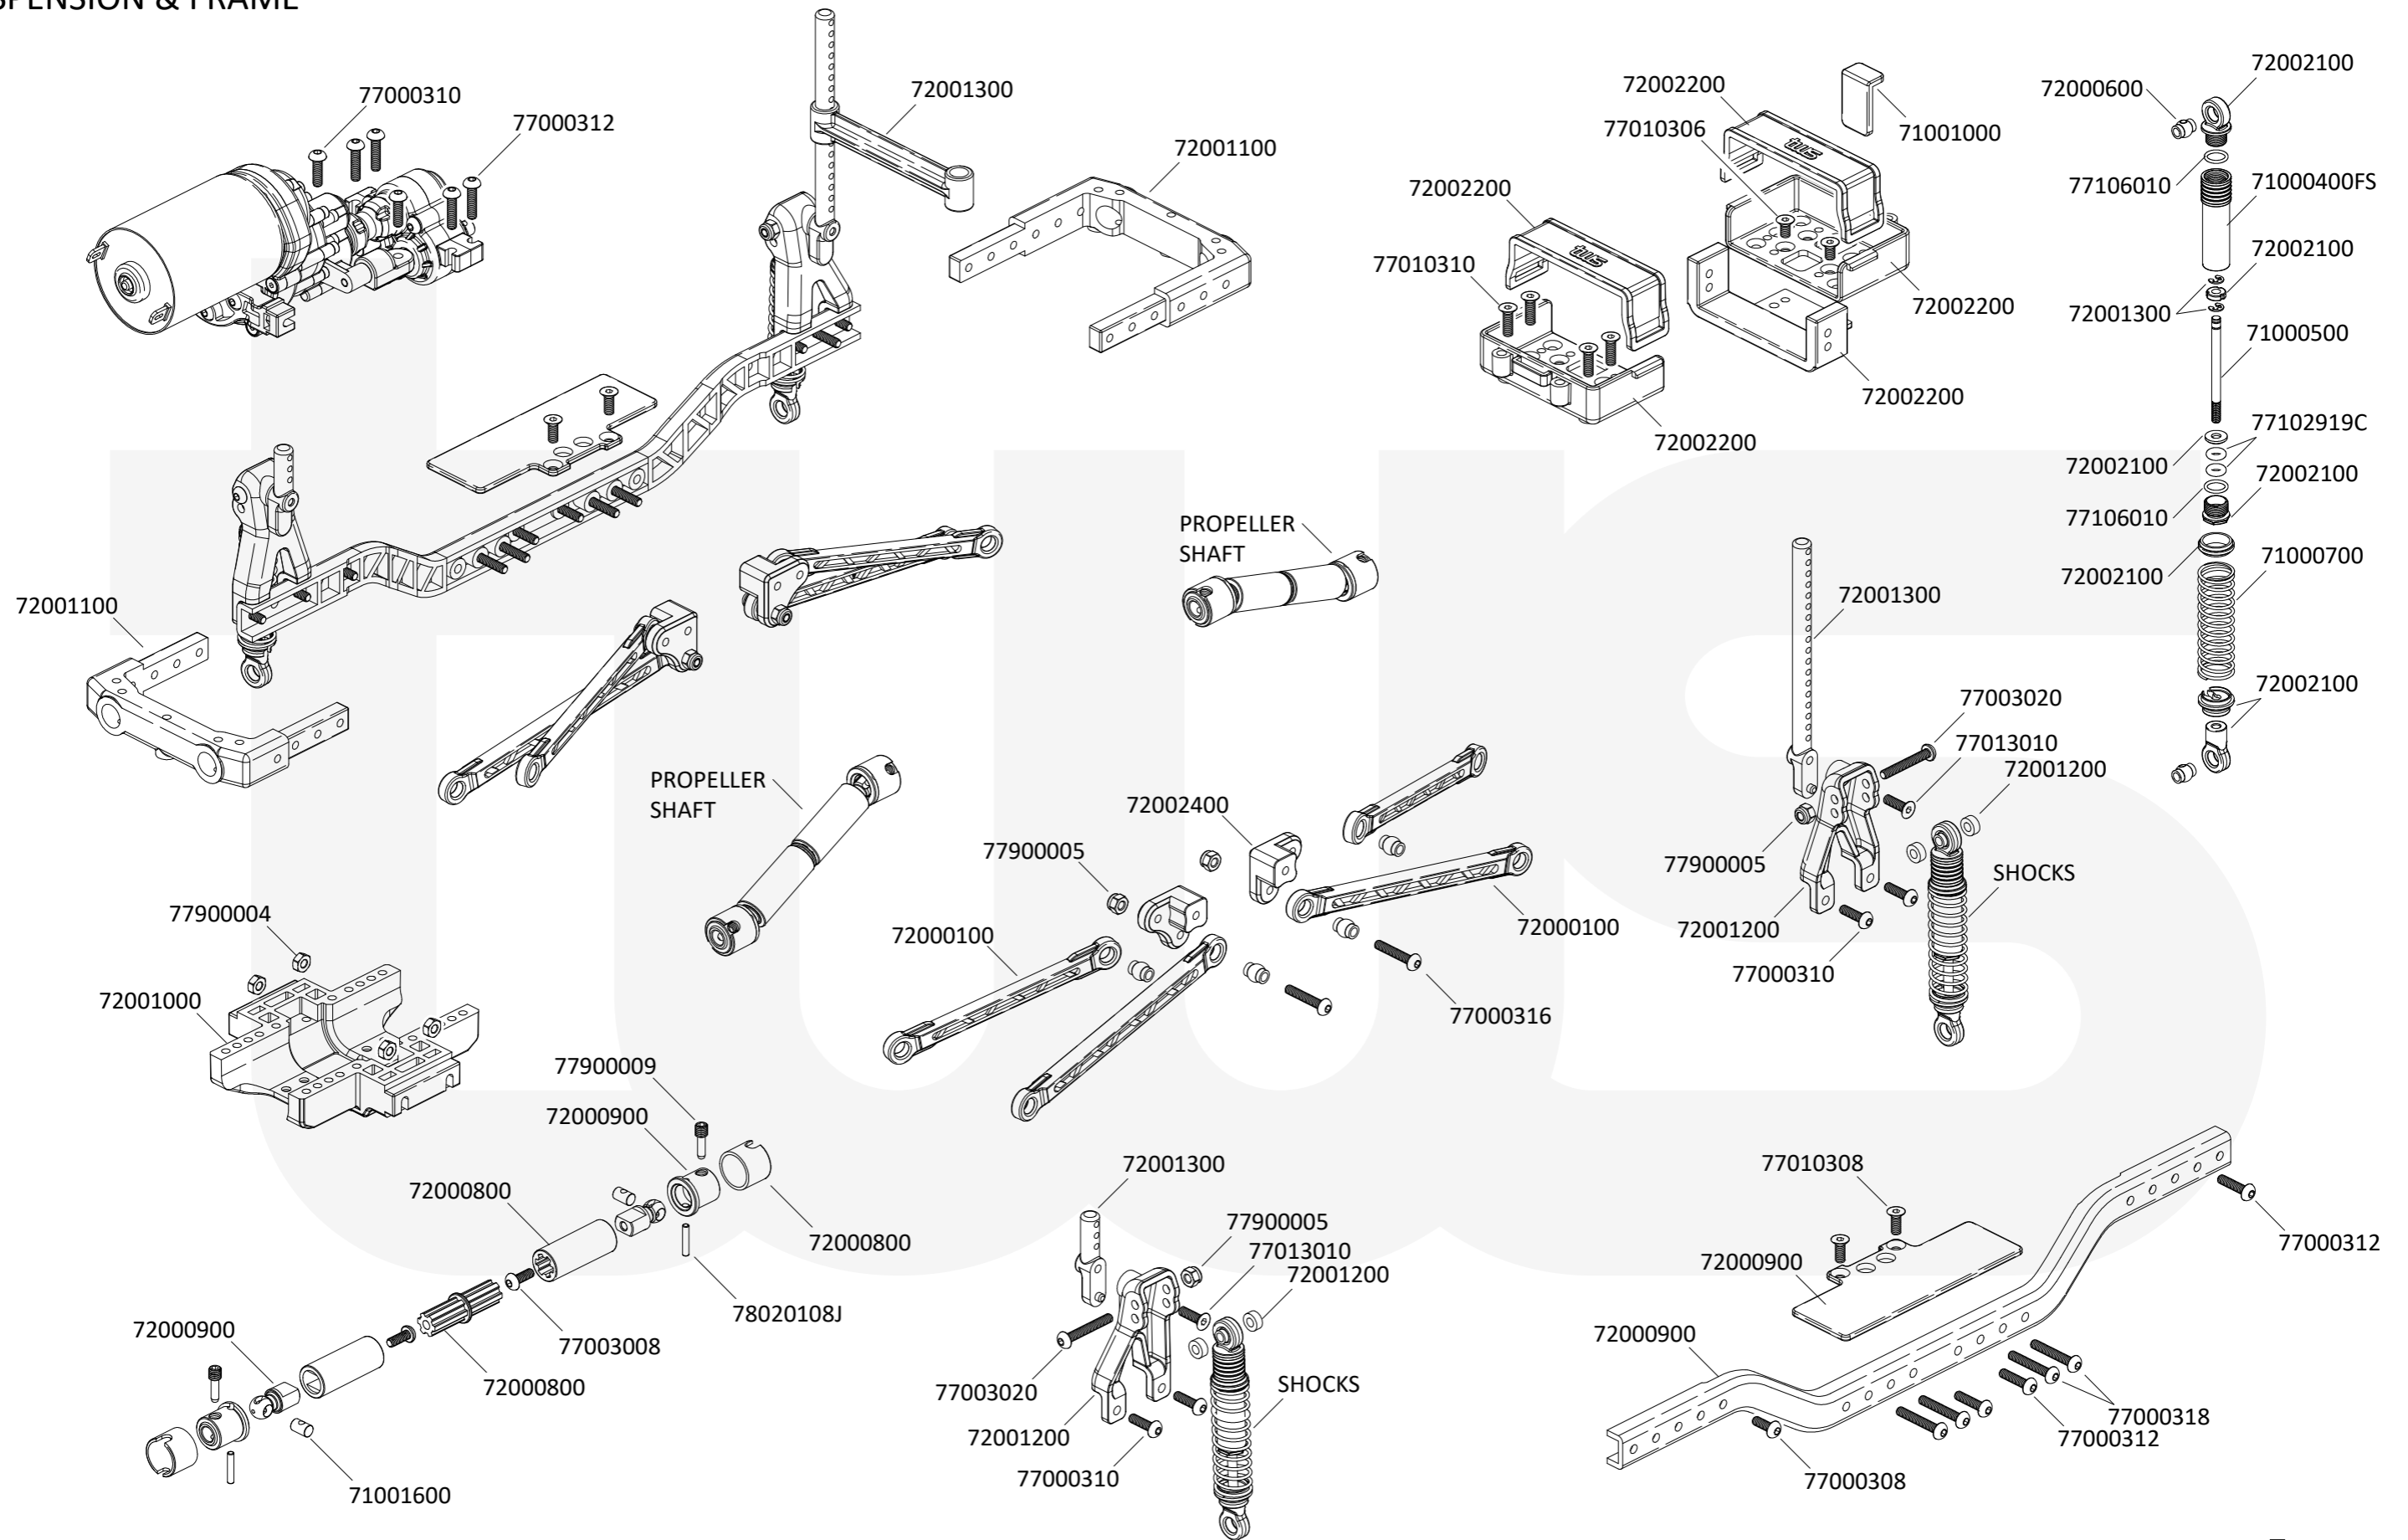

Please refer to the KIT manual if you need more detail.
如需更詳細的資訊，請參閱 KIT 說明書。



