


TX-3S 2.4GHz

INSTRUCTION MANUAL

tws


Transmitter Feature Diagram

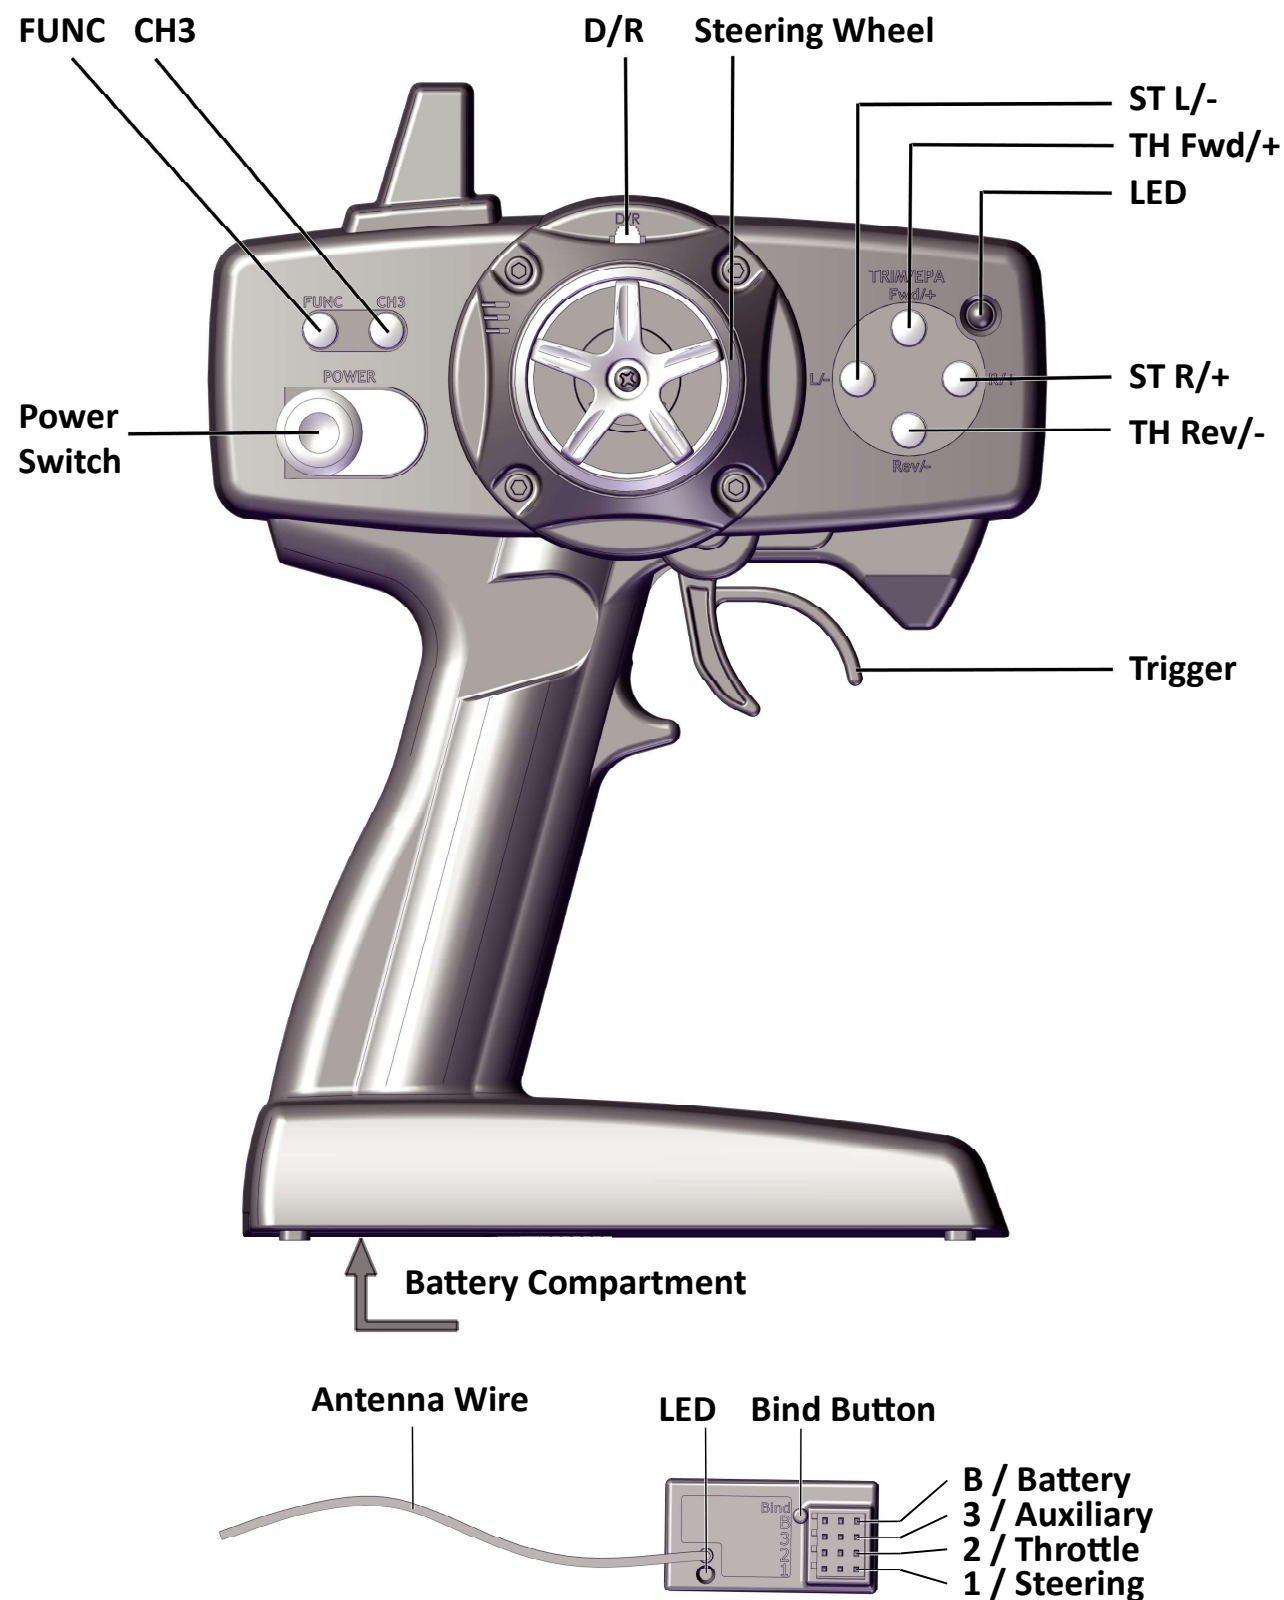


Please refer to the full-version manual if you need more detail.
如需更詳細的資訊，請參閱詳盡版說明書。

Install Batteries

1. Remove the battery cover from the transmitter.
2. Install 4 AA alkaline dry cell batteries.
3. Insert the 4 AA batteries according to the polarity.
4. Replace the battery cover.

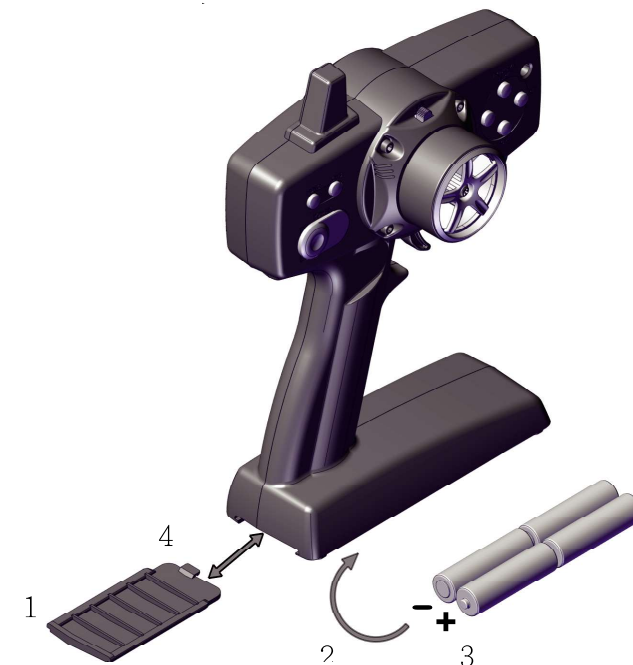

Basic Operation

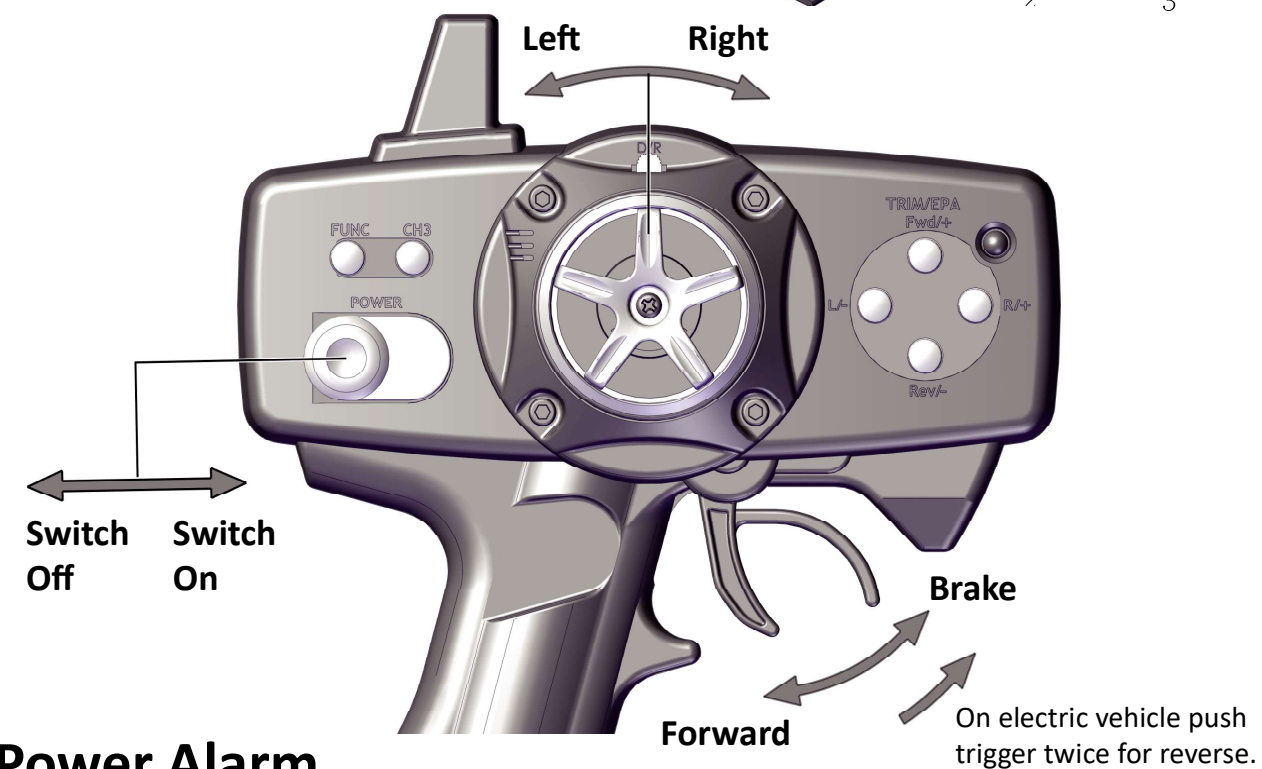

Power Alarm

No Activity Alarm :

When the steering wheel (ST), throttle (TH) or any button is not operated for 15 minutes, a slow beeping alarm will sounds to indicate that there has no action and the power should be turned off.

Low Battery Voltage Alarm :

A quick beeping alarm sounds and power LED light will blink.

Specification

Tx (Transmitter)
 Channels : 3
 RF : ISM Band (2.4GHz)
 Power : DC 6V
 Distance : Open Space 100m
 Battery : Alkaline "AA" size
 Blue LED : indicators
 Color : Black


Rx (Receiver)
 Antenna : Do not roll Antenna up
 CH1 : for steering servo
 CH2 : for ESC
 CH3 : AUX
 Power : DC 4V~9V
 Button : Binding / Fail-Safe
 Blue LED : indicators
 Color : Black

TX-3S 2.4GHz

INSTRUCTION MANUAL

tws


遙控器外觀功能介紹

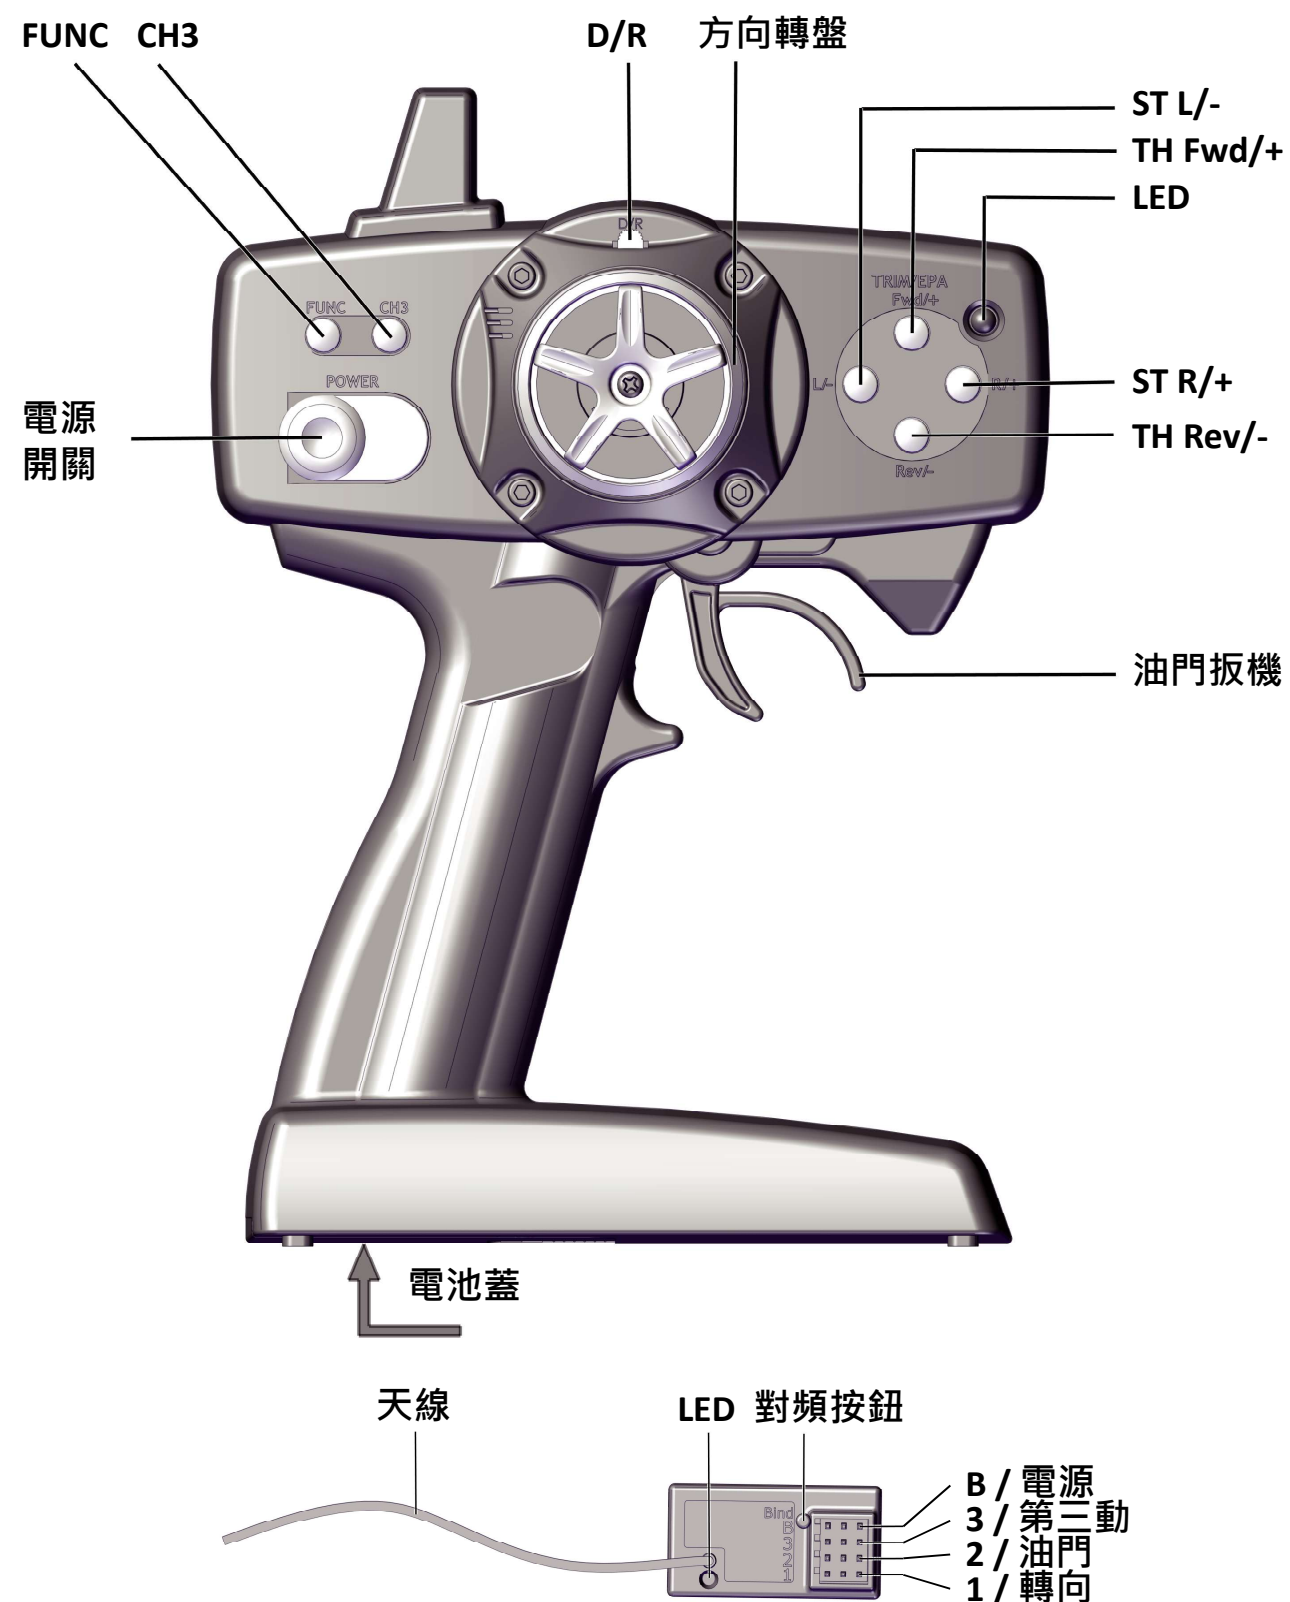


Please refer to the full-version manual if you need more detail.
如需更詳細的資訊，請參閱詳盡版說明書。

安裝電池

1. 拆開電池蓋
2. 安裝4個 AA 電池
3. 依照電池極性安裝
4. 裝回電池蓋

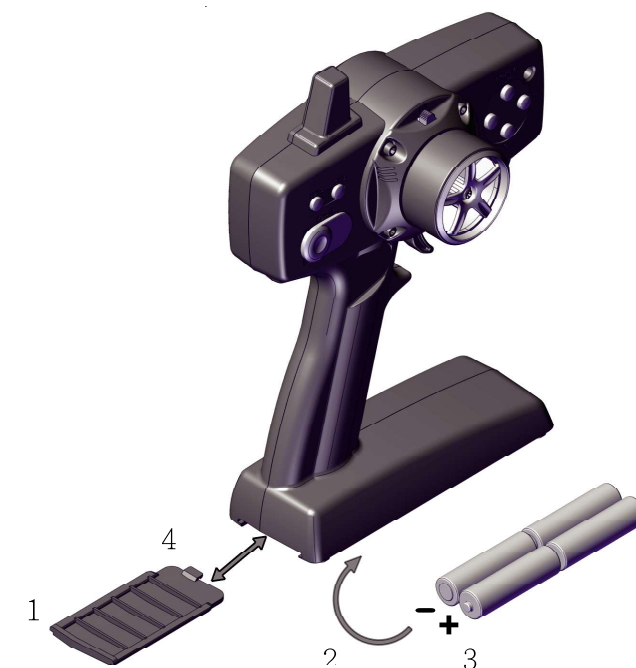

基本操作

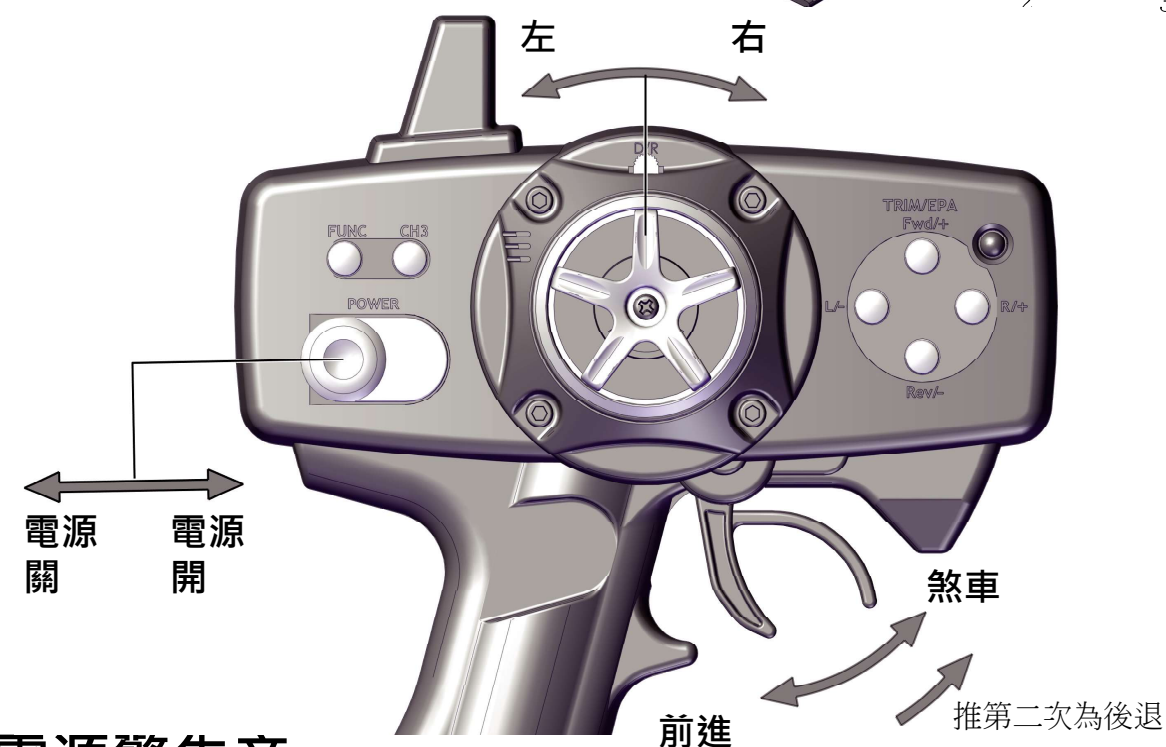

電源警告音

無操作警示：
當靜置15分鐘並無任何操作時，警示短音會響起。
電池低壓警示：
LED 閃爍並帶警示短音。

規格

Tx (發射機)
頻道數：3
RF：ISM Band (2.4GHz)
電源：DC 6V
操作距離：開放空間 100m
電池：乾電池 "AA" 尺寸
藍色 LED：指示用
顏色：黑色

Rx (接收機)
天線：不可捲收
CH1：轉向用
CH2：油門用
CH3：第三動用
電源：DC 4V~9V
按鈕：對頻 / 失控保護
藍色 LED：指示用
顏色：黑色